

適用機種：

URC-2000A URC-2100A

◎ 大通產品型號：

大通產品型號	代碼(TV BOX/選台器/數位盒)
DD-525	695
PDP-1	696
DTV-1100	697
DTV-1700 / DTV-2700 DTV-3300 / DTV-6000 DTV-6200 / DTV-6900	698
DD-520 / DD-530	699
DTV-1200 / DP002STB	700
DTP-107 / DTP-305 / DTP-505 DTP-605 / DTP-807 DTV-6600 / DTV-6700	701
PTV-100	702
HDR-6200 / MDP-906 DTV-6700 / DTV-6600	703 704
TV-600A / MD-600R / F-15	705
DD-535	706
DD-520 / DD-530	707
HD-325 / HD-335 / PD-325 MD-535 / MD-525 / AD-525	708
STV-1680 / STV-1680A / STV-1920A STV-1440 STV-1280 (有FC) / TV-620PIP (有FC) TVB-1400 / TVB-1200 HDMI 1920 / PTR040G (LED 紅) DTV-8000 / ADTV-6200 / F1 / F22 (電壓 12V)	709
STV-1280 (無FC) / TV-620PIP (無FC) F-16 / F-18 / TV-620A / MD-700R PTR043G (LED綠)	359 / 693
F2 / F4 / F6 / F9 / F21 / F17 / F22 (電壓 5V)	363
DTP-105 / DTP-300 DTV-168 / DTV-666 / DTV-888 / DTV-1000@ DTV-2000 / DTV-2100 / DTV-2100 DTV-2100M / DTV-2200M HDTV-2500 / MDTV-1000	339 / 439
PDP-2(新碼)	437 / 692
PDP-2(舊碼)	359 / 693
VC-181	316 / 317 / 359 / 693

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
Hitachi (日立)	146,155,168,169,173,255,527,528 529,530	
Hi TOP		327
IEEC (賴鴻 / 尹鴻)		328,368
IMiro	531	
Infinity	178	
Iwatch		329
iWitch	532,556	
Jasco		440
JBL	178	
JC. Penney	013,030,031,046,047,088,111,118 145,180,212	
Jean (美齊 / 俊)	012,072,078,139,221	
JVC	022,052,056,059,060,061,063,142 146,154,175,176,196,533,534	
Jensen	030,040	
JINXING	304	
KAIDEL (凱都)	535,564,676	
Kaisui	041	
Karcher	041	
Kawasho	000,030,042,128,137	
Kenwood	030,169	
Kloss Novabeam	149,150	
Kolin (歌林)	061,099,117,118,139,171,319,536 537,538,539,540,541,542,543,544 545,546,547,548,549,550,678	330,331,332
KMC	055,140,145	
KTV	055,064,080,140,145,205	
Lakewood		333
LCD TV	554,555	
LG	551,552,553	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
SUMC		361
SUPER SONIC	525,691	
Sylvania (喜萬年)	013,030,031,033,046,049,051,102 118,149,150,178,180,184,186	
Symphonic	037,090	
Synco (新格)	000,128,139,155,171,198,255,615 616	345
Tai Wah	065,067	
Tashiko (大砂谷)	001,072,099,118,155,187,255	
Tatung (大同)	012,014,025,027,093,094,117,118 139,160,171,214,218,617,618,619 620,621,622,623,624	
Technics	082	
Technovision	023	
Techwood	030	
Teco (東元)	003,068,082,105,109,139,155,158 218,223,255,272,588,626,627,628 629,630	
Teknika	030,049,051,053,055,064,118,136 140,144,145,146,161,163,169	
Telecaption II	022,136,214	
Telerent	145,153	
Ten (十全)	315	
TES	631,663	
Tera (泰瑞)	031,077,139	
TFC (旭光)	593,632	
Thomson / ProScan	111	
TMK	030,169	
TORA STAR		346
Toshiba (東芝)	011,012,014,015,024,025,027,069 100,118,120,143,160,161,214,320	

◎ 各品牌產品型號：

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
Acer (宏碁)	484,493,669	
Achinea (幻象)	485,486,487	
Addsion	061	
Admiral	111,115,153	
Aiwa (愛華)	005,006	
Akai (赤井)	131,564,664	
Albatron	488,504	
Amark	140,145	
Amstrad	045	
Anam	064,094	
AOC (愛德蒙)	030,031,055,117,118,136,139,156 160,204,489,673	
Archer		440
ASUS (華碩)	490	
AVAC (飛來訊)		324
Aver Media		325
Avorcent	491	
AWA	062,073,178, 181	
Basic Line	041	
Bell & Howell	153	
BenQ	492,494,682	
Bluesky	313,314,530	
BPL	178,217,272,285,286,287	
Broksonic	066,177	
Caixing	495	
Candle / Citizen (星辰)	030,031,051,053,055,080,088,090 145,161,169	
Centurion	013,033,042	
Century		440,443
Chaparral	096	
CHIMEI (奇美)	559,576,579,670,672,684,685,686	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
LITE II	556,	
Lloytron	145	
Loewe	178	
Lodgenet	153	
Luxman	030,169	
LXI	012,013,024,025,178	
MAG (美格)	557,573	
Magnavox (美格福斯)	013,030,031,033,046,049,051,102 118,140,145,149,150,178,180,184 186	
Majestic	153,183	
Marantz	030,031,087,118,178	
Megatron	078	
Memorex	153	
Microtek (全友)	526	
Midland	183	
MGA / Mitsubishi (三菱)	007,013,030,031,033,047,055,089 101,118,119,124,136,163,169,172 558	
MODE e-style	561	
Monix	562	
MRT-N	563	
MOTOROLA		367
MTC	030,031,118,161,169	
Multivision	054	
NAD	025	
NALTEC (國齊)	672	
National (松下)	001,016,082,083,093,094,097,127 178,187,188,189,190,191,192,193 194,212,218,566,567,568,680	335,336
NEC (恩益喜)	010,013,030,031,033,053,082,118	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
Toshiba (東芝)	633,634,635,636,637,677,679	
Totevision	145	
TOP TEN (鈺田)	564,638	
Trans PX (大通)		316,317,339,359 362,363,364,365 366,369,370,371 372,373,374,375 376,377,378,395 436,437,438,439 440,441,442,443 692,693,695,696 697,698,699,700 701,702,703,704 705,706,707,708 709
Tri-Lex	110(MPEGCard)	
TTV (台視)		347
Tuntex (東帝士)	030,073,139,155,221,255	
U-MEN (優盟)	059,073,077,082,139,155,161,221 255	
Universal	046,048	
UPMOST	208(MPEGCard)	348,349,350
VECVOX		351
V-Gear		352
Victor (勝利)	052,059,061,154,196	
VIDEOCON	015,027,073,284	
ViewSonic	597,639,640,683	
Vidtech	030,118	
VIEWQUEST	645	
VISA	021	
VISSON		353
VITO	625,641,642,666	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
CHIMEI (奇美)	687,688,689,690	
CHUN (青雲)	497,498,499,504,573	
Chun Yun (青雲)	078,099,106,107,117,139,156,191	
Chung Hsin (中興)	061,099,117,118,119,139,171	
CLAIRE	496	
Color tac	671	
Colorlyme	030,039	
COMBO	500	
COMSTAR		360
Concerto	030,169	
Contec / Cony	064,089,090,125,135,142,146,173	
CORAL (酷樂)	501	
Coronado	140,145	
Craig	064,090	
CRESCO (光軒)	502	
Crown (王冠)	140	
Curtis Mathes	013,030,031,033,111,145,161,211	
CXC	064,090	
Daewoo (大宇)	030,055,076,091,118,145,148,215 216	
Daytron	013,030,033,055,145	
Digimaster	503	
Disastra	030,042,078,161,163	
Dumont	183	
DVB-T		326
Dynaview	504,505	
Electrohome	030,047,055,089,118,124,145,169	
Elephant (大象)		443
Emerson (愛默生)	017,020,030,037,038,045,055,064 066,080,089,090,135,136,140,145 146,159,162,163,174,177,182,206	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
NEC (恩益喜)	138,169,223,270	
NEOKA (新禾)	560	
Newave (祿威福)	072,191,197,198	
NEW COLOR	580	
NICHIRO	564	
Ommi		334
ON COMMAND VIDEO	179,065,127	
Onking	080	
Optima	565	
Orion	062,064,066,177	
PBI (百一)		337
Philco	030,031,051,102,118,140,145,146 149,150,178,184,186,217	
Philips (飛利浦)	000,016,031,049,050,051,103,128 140,146,149,150,178,179,184,186 201,202,203,217,570,571,572,673	
Pinker	526	
Pioneer (先鋒 / 百音)	018,030,035,170	
Polestar	092	
POLY VISION	574,575,576,577,578,579,672	
Portland	030,055,118,140,145	
POWER SONIC	525,691	
Praxis	098	
Proton (普騰)	030,031,042,055,073,075,077,078 081,086,139,145,146,167,226,294 581,582,583,672	
PROSAT (百勝)		338
Pulsar	183	
Quasar	094,213	
Radio Shack	013,024,064,090,142,145,146,276	
RCA	030,111,112,113(DSS),114,115	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
VIZIO	643	
VTEK	644	
Wards	004,013,030,031,033,037,046,048 049,051,118,136,145,149,150,153 163,178,184,186,276	
Waltz (華爾滋)	645,646	
Warton (華頓)	059,061	
WEELGOOD	647	
WestingHouse (西屋)	051,516,525,583,648,649,650,651 652,653,668,691	
Yamaha (三葉)	030,118,169	
Yorx	013,033	
Zenith (增你智)	151,152,183,293(Hotel)	395
ZEM Audio	654	
ZIN WELL (兆赫)	655,656,	354
新世代	578	
太尹	073,108,198	
先大		355
揚興		357
無間道		356
聖崗		358
北京 (BEIJING)	124,141	
百合花	219	
光明電子	219	
牡丹	062	
快樂	062	
東大	073,141	
東華	141	
東寶	062,073,141	
松日	073,141	
長虹 (ChangHong)	015,141,219,290,291,292,298,303	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
Emerson (愛默生)	207,209,278	
Envision	030,031,042	
Ether (宇瑟)	030,073,078,191	
ESONIC	506	
Ex-POWER	563	
Fisher (燕聲)	014,024	
Frigidaire (富及第)	496,507,508,509,524,526	
Fujimaru	573	
Fujitsu (富士通)	051,163	
General (將軍)		
FUJITSU (富士通)	510	
Fullness (富井)	058,062,064,070,071,090,136,163 220,221	
Funai (船井)	030,046,047,048,090,094,111,115 148,180,212,213	
G.E. (奇異)		084,100
G.I / Jerrold (通用)		
Gibraltar	183	
Gintai (敬泰)	072,119,121,139	
Gibson (吉普生)	511,512,513,514,515,516,517,518 519,525,691	
Goldstar (金星)	013,030,034,042,055,075,079,088 118,140,145,146,169,062,219	
Hallmark	030,042	
HANNS-G (瀚宇)	612	
HANNspree	520,521,522	
HERAN (禾聯)	523,524,525,526,691	
Hero Sonic	525,691	
Hi-Net (MOD) 中華電信		322,323,694
HIPLUS	485,486,580,674,675	
Hitachi (日立)	002,028,030,032,043,044,048,051 055,057,122,126,139,140,142,145	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
RCA	116,134,204,275,321,584	
Realise (瑞林)		340,341,342,343
Realistic	013,024,064,145,278	
RELON (雷諾)	526	
RGM	585	
Runco	021,183	
Sampo (聲寶)	001,013,030,031,033,042,072,074 108,147,155,171,187,197,198,214 255,587,588,589,590,591	
SAGA	672	
Samsung (三星)	013,030,031,033,036,055,069,118 140,142,145,146,155,157,160,161 169,195,210,211,221,255,273,288 310,311,312,185,592,594	
Sanyo (三洋)	008,009,013,014,019,024,084,095 104,139,165,274,277,062,595,596 597,598,599,600,601,602,603	344
Scott	013,033,090,136,145,146,163	
Sears	012,013,014,024,025,030,069,084 085,140,145,148,154,161,163,169	
Sharp (夏普)	002,017,030,055,123,125,140,145 146,197,198,199,224,276,279,604 605,606,607	
Silver (銀聲)	030,163	
Singer (勝家)	082,221	
Sony (新力)	000,121,128,129,130,131,132,133 139,171,206,282,149,586,609,610 611,681	483
Soundesign	030,051	
Sowa (首華)	012,093,117,139,160,171,506,612 613,614	
	030,064	

Brand / Device (廠牌/電器機種)	一般電視/液晶電視	TV BOX/選台器/ 數位盒
長城	141	
長風	0	