

CE

SS-628 Series Mini Hot Air Gun



User's Manual

1st Edition, 2023 @2023 Prokit's Industries Co., Ltd.

IMPORTANT SAFETY INSTRUCTIONS

Before using, please take a few minutes to read all instructions carefully and pay attention to safety notices and warnings to ensure work safely. Keep these instructions for future use.

WARNING

- * To reduce risk of fire or electric shock, do not expose to rain or moisture. Store indoors.
- * When servicing, use only identical replacement parts.
- * Never use the heat not airflow toward people or animals.
- * Never use the heat gun near flammable materials or gases.
- * Never obstruct the hot airflow by blocking or covering the air outlet.
- * Never touch the hot air nozzle, it becomes extremely hot.
- * Always wear protective work gloves.
- * Never touch the nozzle to any surface when running the gun or shortly after running.
- * Always wear eye protection when removing paint from overhead positions.
- * Do not wear loose-fitting clothing or jewelry. Wear nonskid footwear and protective cap to wrap long hair.
- * Maintain proper balance and always footing.
- * Keep the gun handle dry, clean, and free from oil and grease.
- * Do not force the tool or accessories and use only for the purpose intended.
- * Always stand gun in an upright position or hang it up by its convenient hanger.
- * Never use in wet environments or areas of high humidity (for example: bathroom, steam rooms, etc.)
- * Never poke anything down inside the hot air nozzle.
- * Always allow the heat gun to cool/down completely before storing it.
- * Always store the gun in a safe place, out of the reach of children.
- * Be aware of the work environment. Areas behind ceilings, floors, and soffits may contain highly flammable materials. Always check these areas before applying heat.
- * Keep work area with sufficient light.
- * Guard against electric shock by preventing contact with grounded surfaces (for example: pipes, radiators, ranges, refrigerator enclosures.)
- * Never carry the gun by its power cord or yank the cord from an electrical outlet.
- * Inspect extension cords periodically and replace of damaged.
- * When using the tool outdoors, only employ extension cords intended for use outdoors and marked "W-A"
- * When working on small or irregular shaped objects, secure with vise or clamps.

- * Disconnect the tool when not in use. Avoid unintentional starting. If the gun shuts down during operating, disconnect from the power supply and have gun serviced by authorized service personnel.
- * To be on the alert! Please pay attention to the work and use common sense when operating this tool. Do not operate the tool when you are tired or taking medication or drugs that make you drowsy.
- * Air nozzle should not be blocked.

Specification

| Model | Voltage | Setting | Power | Temperature | Air Volume |
|---------|-------------------------|---------|-------|--------------|------------|
| SS-628F | AC 230/240V 50 /60Hz | I | 250W | 350℃ | 150L/min |
| | | II | 500W | 500℃ | 300L/min |
| SS-628A | AC 110-120V 50 /60Hz | I | 250W | 350℃ | 150L/min |
| | | II | 500W | 500 ℃ | 300L/min |

| Size | Weight | Heating element | Plug Type | |
|-------------|--------|---------------------|-----------|---------|
| 225×47×52mm | 370g | SS-628F :5SS-628F-H | SS-628F | SS-628A |
| | | | F 🚥 | A |
| | | SS-628A :5SS-628A-H | | |

Attachment: Reflector Bayonet Nozzle x1pc



Purpose (can only be used in the following situations)

- 1. When removing or applying paint, a hot air nozzle and scraper can be used.
- 2. Remove self-adhesive stickers and decorations.
- 3. Remove rust or excessively tight nuts and metal screws.
- 4. Dissolve frozen conveying pipes, frozen door locks or padlocks, etc.
 - ▲ Warning: Do not use on plastic pipes

Before treating oil, stains or replacing old grinding powder, it can be softened first.

- 6. Before combining or processing, the damp wood needs to be dried first.
- 7. Shrinkable PVC film as a protective layer for packaging.
- 8. It can be used for waxing or de waxing on sleds.
- 9. Polyethylene material that can shrink and connect metals.

10. It can soften the welding material.

Name of Parts



- 1.Air outlet: for nozzle
- (2).Scald proof sheath
- (3). Vertical Stand
- (4). Air inlet
- (5).Adjustment switch (OFF/I/II)

Adjustment switch



O: OFF

I: 250W 350°C 150L/min
II: 500W 500°C 300L/min

Maintenance and repair:

Do not use Turpentine, paint mixture, gasoline or the same substance for cleaning.

- 1. When storing the hot a Mini heat gun, please confirm that it has completely cooled down.
- 2. Regularly remove accumulated dirt from the air inlet and maintain cleanliness of the air inlet and outlet.
- 3. Check all extended insulated wires and replace them immediately if damaged. Do not use damaged insulated wires as they may cause electrical shock and injury if touched.
- 4. All repairs must be carried out by authorized service centers or other qualified service organizations to ensure safety and reliability.

SS-628G 迷你热风枪使用说明书

一、 安全准则

▲ 注意

请在使用工具前熟读本说明书,遵守基本的安全规则,以降低火灾、电击及个人伤害的 危险。请保存本说明书备日后参考。

- 1. 保持工作场所的整洁,脏乱的工作场所容易产生危险。
- 2· 工作前请查看工作环境,不要在有水或潮湿的场所使用,不要在易燃的液体或气体旁使用。
- 3. 移动工具时,请不要拉电源线,不可使电源线与热源、油品接触。
- 4. 户外使用时,应使用合格的延长线。
- 5. 为避免电击发生,身体不要接近接有地线的物体,如:管线、暖气炉及电冰箱。
- 6. 避免儿童及其他人员接近工作场所和接触工具,工具不使用时,应将电源线拔离电源插座,并妥善放置于高处,避免孩童接触。
- 7. 请使用铁箍或老虎钳固定加工件,不可用手挟持。
- 8. 注意使用时的状态,保持警觉性并避免在疲劳时使用工具。
- 9. 工作时不要操之过急, 随时保持平衡操作。
- 10. 使用工具前先检查工具是否有损坏,零配件是否有松动或遗失。
- **11** · 请在开关为关闭状态下连接电源,使用完毕或更换零件时必须切断电源,并将电源线拔离电源插座。
- 12. 使用不合格的配件可能导致危险发生,请更换原厂合格的配件。
- 13. 请在工具设计用途范围内使用,不要过度使用工具,以保证其正常工作效率与安全
- 14. 工作时应穿适合的服装,穿宽松衣服,佩戴首饰可能会被卷入转轮而产生危险; 户外工作时应穿戴橡皮手套及鞋子,并且使用头套保护头发。
- 15. 工作时可能会产生大量灰尘,请使用安全面罩或防尘面具。
- 16. 长时间的工作中,请使用眼罩及耳罩等防护装置。
- 17. 出风嘴不要堵塞。

二、 规格

| 型号 | 电压 | 檔位 | 功率 | 温度 | 风量 |
|---------|-------------|----|------|------|----------|
| SS-628G | AC 220~240V | I | 250W | 350℃ | 150L/min |
| | 50/60 Hz | II | 500W | 500℃ | 300L/min |

| 外观尺寸 | 重量 | 發熱芯 | 插头 |
|-------------|------|------------|----|
| 225x47x52mm | 370g | 5SS-628F-H | G |

附件: 回风风嘴一个



二、 用途(只能在以下情形使用)

- 1. 去除油漆或涂油漆时,可以使用热风喷嘴及刮除具。
- 2. 去除自粘性贴纸及装饰。
- 3.解除生锈或太紧的螺帽及金属螺丝。
- 4·溶解结冻的输送管,结冻的门锁或挂锁等。 ▲警告:请勿使用在塑料管上
- 5. 在处理油污或更换旧磨粉前,可先行软化。
- 6. 在组合或加工之前,需先将受潮的木头变干。
- 7. 可收缩 PVC 膜作为包装的保护层。
- 8. 可使用在雪橇的上蜡或除腊。
- 9. 可收缩连接金属的聚乙烯物。
- 10. 可软化焊接物。

四、 产品介绍



①.出风口(可接风嘴配件) ②.隔热护套 ③.支架 ④.进风口 ⑤.开关

五、 开关



O: 电源关闭

I: 250W 350°C 150L/min
II: 500W 500°C 300L/min

六、 保养与维修:

请勿使用松节油,油漆混合物,汽油或相同物质清理

- 1. 贮存热风筒时,请确认热风抢已完全冷却。
- 2. 经常清除进风口积存的脏物,并保持进出风口之洁净。
- 3. 检查所有延伸的绝缘电线,若损坏,请立刻更换。请勿使用受损的绝缘电线,因为若碰触到可能会受到电击而引起伤害。
- 4. 所有维修都须经过授权的服务中心或其他合格的服务组织,以确保安全性及可靠。

ProsKit®中国地区产品保固卡

| 购买日期 | | 店章 |
|------|----------|----|
| 公司名称 | | |
| 联络电话 | | |
| 电子邮箱 | | |
| 联络地址 | | |
| 产品型号 | □SS-628G | |

- ※ 在正常使用情况下,自原购买日起12个月免费维修保证(不含耗材、消耗品)。
- ※ 产品保固卡需盖上店章、日期章,其保固效力始生效。
- ※ 本卡请妥善保存,如需维修服务时,请出示本卡以为证明。
- ※ 保固期满后,属调整、保养或是维修性质之服务,则酌收检修工时费用。若有零件需更换,则零件费另计。

产品保固说明

- 保固期限内,如有下列情况者,维修中心则得酌收材料成本或修理费(由本公司维修人员判定):
 - 对产品表面的损伤,包括外壳裂缝或刮痕
 - ·因误用、疏忽、不当安装或测试,未经授权打开产品修理,修改产品或者任何其它超 出预期使用范围的原因所造成的损害
 - 因事故、火灾、电力变化、其它危害,或自然灾难所造成的损害。
- 非服务保证内容:
 - 机件本体外之消耗品: 如发热芯. 等消耗品
 - 机件本体之外之附配件:如电源线、风嘴、支架等附配件。
 - 超过保证期限之給修或服务,虽未更换零件,将依公司保固维修政策酌收服务费。

制造商: 宝工实业股份有限公司

地 址 : 台湾新北市新店区民权路130巷7号5楼

电话: 886-2-22183233

E-mail: pk@mail.prokits.com.tw

销售/生产商: 上海宝工工具有限公司

地址: 上海市浦东新区康桥东路1365弄25号

原产地: 中国. 上海

电话: 021-68183050 服务热线: 400 1699 629



寶工實業股份有限公司

PROKIT'S INDUSTRIES CO., LTD

https://www.prokits.com.tw

Email: pk@mail.prokits.com.tw

©2023 Prokit's Industries Co., LTD. All rights reserved 2023001(C)